


# Fancort Dispense Kit

Fancort Industries

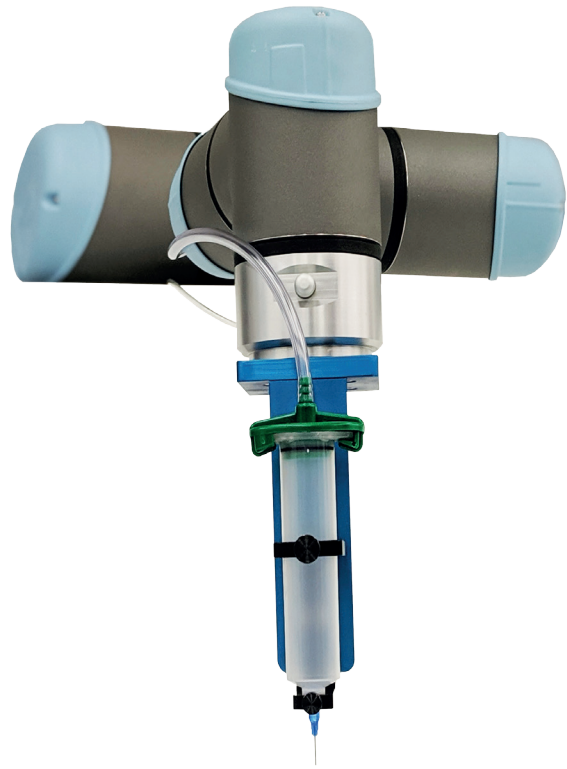

## How does it work?

With your UR robot rigidly mounted and a flat surface working area available you can get quickly started by mounting the universal dispense valve assembly to your robot, plug the controller into power, air, connect the wiring harness (pre-wired) and pressure lines (quick connects).

Once setup you can follow the quick start instructions to being laying down the bead size required.

## Technical Details

**Includes a URCap plugin:** Yes

**Compatibility:** UR3e, UR5e, UR10e, UR3, UR5, UR10 (CB3.1, CB3.0)

**Software required:** Polyscope 3.7 and up

**Dependencies:** 80 PSIG air supply. 120 V single phase power

**Dimensions:** Controller, Bracket

### What's in the box:

- Controller • Universal Dispense Bracket • Quick connect wiring harness
- Syringe • Syringe mount • Precision dispense needle sample kit (~150 Tips) • Dispense dot volume chart • Quick Start Manual
- Foot Pedal (for manual dispense) • Tube set • Misc fittings

**License type:** One time purchase

## Features and Benefits

- + **Fast Setup:** Universal bracket/ pre-wiring/tuning/syringe includes everything you need to begin dispensing in minutes.
- + **Plug & Play Integration:** Pre-configured wiring harness includes UR connector, control box hole grommet, and CAP for communication setup.
- + **Flexible & Upgradable:** Universal bracket works with syringe and many of our advanced valves.
- + **Onboard Instructions:** Includes teach pendant software with instruction library to help support your dispense questions and get you up and running faster.

## Suited for the following applications

- + Gluing, dispensing and welding

### Fancort Industries

Phone: 888-326-2678

E-mail: [jlevin@fancort.com.com](mailto:jlevin@fancort.com.com)

Web: <https://fancort.com/Products/Dispensing.aspx>



[universal-robots.com/plus/](https://universal-robots.com/plus/)